



Dell XPS 13 9350 Wireless Card Replacement

This guide will explain how to replace the Wi-Fi card in the Dell XPS 13 9350.

Written By: Jay



INTRODUCTION

Use this guide to replace the Wireless Network Interface Cards (NIC) in your Dell XPS 13 9350.



TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Cover




- Remove the eight 4 mm T5 Torx screws from the bottom cover.

Step 2




- Lift up the back cover using both hands.

Step 3 — Wireless Card

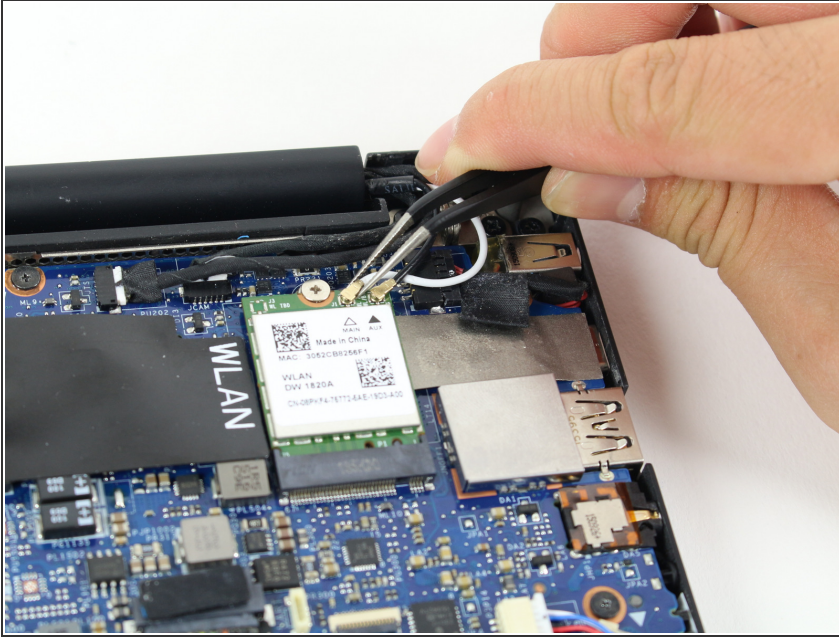


- Use tweezers to remove the white and black connectors by pulling them away from the Wi-Fi card.
- ⓘ Grab the connectors gently from the bottom of the metal heads.

Step 4

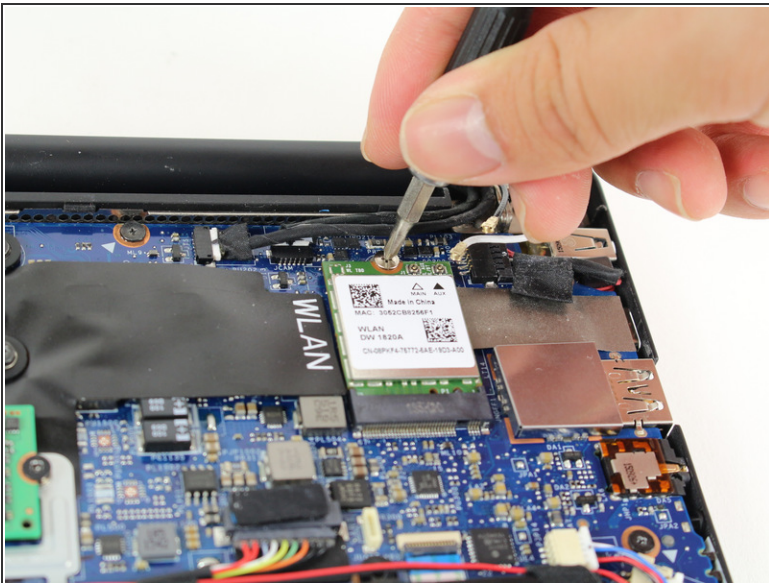

- Remove the 3 mm Phillips #0 screw that secures the Wi-Fi card in place.
- ⓘ The Wi-Fi card will pop up at a 45-degree angle once the screw is removed.

Step 5

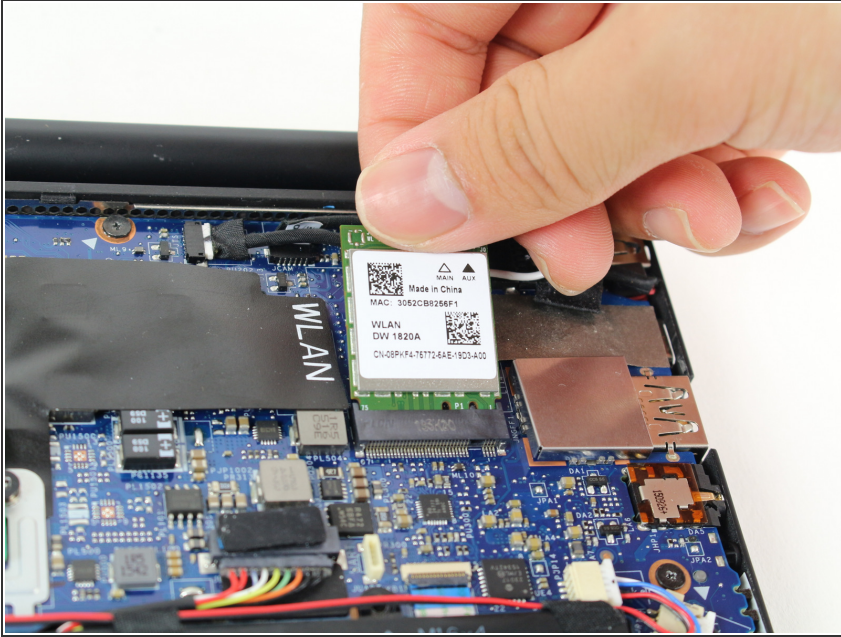

- Use your hand to gently remove the Wi-Fi card by pulling it up and away from its base.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-01 02:23:40 AM.